



Targeted warmth for outdoor seating

A flexible cordless heat pad for your back or seat. Use it on a garden chair, lounge sofa, bench or camping chair and enjoy direct infrared warmth from the heating zone at the front.

SIZE	62x55cm
HEATING ZONE	1 × ca. 33x22cm
FINISH	Durable outdoor fabric
POWER BANK	20,000 mAh

Before every use: Use only in a sheltered, dry place. The Heatpad is not waterproof: protect it from rain, dew and wet surfaces and store it indoors after use.

Quick start

Lay it flat, connect the battery and select the desired heat setting.

1 Position the Heatpad

Place it flat against the backrest or on the seat, with the heated side facing your body. Do not fold the Heatpad sharply.

2 Connect the power bank

Insert the USB-A plug firmly into a 5V output of the charged Warmpi power bank and store it in the upper pocket.

3 Switch on and select heat

Press and hold the button for 2–3 seconds. Press briefly to cycle through red, blue and green.

4 Use with direct contact

Allow 5–10 minutes to warm up. Heat is felt best when your back or seat is in contact with the heating zone.

Three heat settings

Actual warmth also depends on the surroundings, contact and condition of the power bank.

RED

approx. 60 °C

highest consumption

BLUE

approx. 50 °C

medium consumption

GREEN

approx. 40 °C

longest operating time

Caution: If in doubt, start on green and increase gradually. Stop immediately if you feel burning, pain or discomfort. Prolonged contact on the highest setting may be too warm for sensitive skin.

Using the supplied 20,000 mAh power bank

Charge the power bank fully first and keep the plug, cable and pocket free from tension or sharp bends.

1. Charge fully


Charge the power bank separately from the Heatpad with a suitable charger.

2. Connect USB-A

Insert the integrated USB-A plug fully into a 5V output rated at least 2A.

3. Store securely

Place the connected power bank in the upper pocket, away from the heating zone and body pressure.

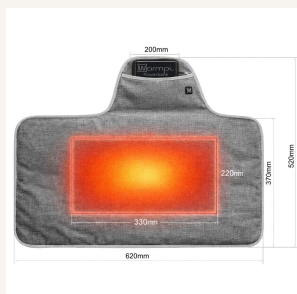

Connect and place in the pocket

Open the upper pocket, connect the USB-A plug and lay the power bank flat inside. Make sure the cable and plug are not pinched when you lean or sit against the Heatpad.

Charging the power bank

Remove the power bank from the pocket and charge it separately. Do not use the Heatpad while the power bank is charging.

Quick troubleshooting

Problem	Check and solution
Heatpad does not switch on	Check that the power bank is charged, the USB plug is fully connected and the output supplies at least 5V/2A. Hold the button for 2–3 seconds.
Heatpad switches off	Recharge the power bank, reconnect USB and inspect cable and plug for damage. Disconnect briefly to reset power-bank protection.
Heat is barely noticeable	Place the heated side against the body, allow 5–10 minutes to warm up and make sure the Heatpad lies flat and unfolded.
Heat feels too strong	Select a lower setting, add a thin textile layer or stop using it if discomfort continues.
Cable, button or fabric is damaged	Stop immediately, disconnect the power bank and contact Warmpi. Do not open or repair it yourself.



Stop immediately if there is smoke, an unusual smell, abnormal heat, discolouration, a damaged cable or power bank, or if the Heatpad becomes wet. Disconnect the power bank and do not reuse before inspection.

Important safety rules

- Do not use for anyone unable to sense heat properly or respond independently.
- Children and people with reduced sensitivity may use it only under continuous supervision.
- Do not use while sleeping and never leave switched on unattended.
- Always use flat and unfolded; do not fold sharply, pierce, crush or place under heavy weight.
- Keep the power bank and plug outside the heating zone and away from body pressure.
- Use a suitable 5V power bank rated at least 2A; do not use while the power bank is charging.
- Use outdoors only in a sheltered, dry place; never expose it to rain, dew or wet surfaces.
- Do not combine with a hot-water bottle, electric blanket or other heat source.
- Stop in case of pain, numbness, redness or discomfort and seek medical advice if unsure.
- Inspect the fabric, button, cable, USB plug and power bank for wear or damage before every use.

Cleaning and storage

- Switch off, disconnect the power bank and let the Heatpad cool completely.
- Spot-clean carefully with a slightly damp cloth and mild detergent only.
- Do not immerse, machine wash, bleach, iron, wring or tumble dry.
- Air-dry completely before reconnecting the power bank.
- Allow the Heatpad to dry fully and store it indoors after outdoor use.
- Store flat or loosely rolled; do not place heavy objects on the cable, button or heating zone.

Technical specifications

MODEL	Heatpad Outdoor
SIZE	62x55cm
HEATING ZONE	1 infrared zone approx. 33x22cm
SETTINGS	Red / blue / green
INPUT	5V DC · minimum 2A · USB-A
POWER BANK	Warmpi 20,000 mAh included
FINISH	Durable outdoor fabric
USE	Sheltered, dry outdoor use



Questions, damage or disposal

Contact info@warmpi.com and include the model and order details. Do not dispose of electrical parts or power banks with household waste; recycle them according to local rules. Warmpi · De Vest 25 · 5555 XL Valkenswaard · The Netherlands · www.warmpi.com