

Comfortable infrared warmth on your chair



A heated outdoor seat cushion with 5 cm memory foam for the garden, terrace, balcony or campsite. The water-repellent UV-resistant fabric, included 10,000 mAh power bank and integrated 2.5m USB cable let you choose cordless use or extended use through USB.

SIZE	40x40x5cm
PADDING	5 cm memory foam
HEAT	3 settings - approx. 35/45/55 °C
POWER	5V / minimum 2A

Before every use: check the fabric, zipper, button, cable, USB plug and power bank for moisture, damage, wear or discoloration.

Quick start

Place the cushion flat, connect the power bank and select the desired heat setting.

1 Place and secure

Place the seat cushion flat on a stable, dry chair. Use the two hook-and-loop straps when the chair is suitable.

2 Connect the power bank

Turn the cushion over, open the zipper at the back and fully connect USB-A to the charged 10,000 mAh power bank. Place the power bank directly to the left inside the cushion and close the zipper without trapping the cable.

3 Switch on

Press and hold the button for about 2 to 3 seconds. Press briefly to cycle through red, blue and green.

4 Allow it to warm up

Wait 5 to 10 minutes. Warmth is clearest when your body is in direct contact with the seat surface.

Three heat settings

Guide values under normal conditions; outdoor temperature, body contact and battery condition affect perceived warmth.

RED

approx. 55 °C

highest warmth

BLUE

approx. 45 °C

medium setting

GREEN

approx. 35 °C

gentle warmth

Caution: For sensitive skin, start on green and increase only while comfortable. Stop immediately for pain, burning, numbness, redness or other discomfort.

Included 10,000 mAh power bank

Fully charge the power bank before placing it in the cushion. Always charge it outside the cushion and do not use the seat cushion while charging.

1. Turn the cushion over

Switch off, place the underside facing up and open the zipper.

2. Connect USB-A

Insert the integrated USB-A plug fully into a 5V output rated at least 2A.

3. Store the power bank

Place the connected power bank directly to the left inside the cushion. Avoid sharp cable bends and close the zipper.



Removing and charging the power bank

Switch off, disconnect USB and remove the power bank through the zipper. Charge it separately with a suitable charger. Never reinsert a hot, damaged or swollen power bank.

Using the 2.5m cable

Connect the integrated cable to a suitable USB port or 5V adapter rated at least 2A. Route it to prevent tripping, pulling, pinching and sharp bends.

Troubleshooting

Situation	Check and solution
No warmth	Check battery charge, full USB-A connection and a 5V/minimum 2A output. Hold the button for 2 to 3 seconds.
Button flashes / cushion switches off	Fully recharge, inspect cable and plug and test another suitable 5V supply. Stop after repeated shutdowns.
Warmth feels mild	Wait 5 to 10 minutes, check the setting and ensure the cushion lies flat with direct body contact.
Warmth is too strong	Switch to blue or green, stand up briefly or stop completely if discomfort continues.
Moisture, odour or damage	Switch off, disconnect and do not use again until Warmpi has assessed the product.

Safety, care and storage

For all Warmpi Outdoor seat cushions 40x40x5cm



Page 3 of 3



Stop immediately for smoke, burning smell, abnormal heat, discoloration, a hot USB connection, cable damage, a swollen power bank or a soaked cushion. Disconnect power and contact Warmpi.

Important safety rules


- For personal warmth and comfort only; this is not a medical device.
- Use only on a stable chair and always flat, without sharp folds or kinks.
- Do not use while sleeping, unattended or under heavy objects.
- Do not use on the ground, stand, jump or kneel on it, pierce it or crush it.
- Water-repellent is not waterproof: protect the cushion, zipper, button, USB and power bank from rain, dew and wet surfaces.
- Children and people with reduced heat sensitivity require continuous supervision.
- Do not combine with a hot-water bottle, electric blanket or another heat source.
- Use only a suitable 5V supply of at least 2A and never while charging the power bank.
- Place the power bank only in its intended position and do not trap plug or cable.
- Check the skin regularly and stop for pain, numbness, redness or discomfort.
- Keep connections free from dirt, liquids and metal objects.
- After use, switch off, disconnect and allow the cushion to cool.

Cleaning and storage

- Switch off, disconnect and remove the power bank; let the cushion cool completely.
- Spot-clean only with a slightly damp cloth and mild detergent.
- Do not immerse, machine-wash, bleach, iron, wring or tumble-dry.
- Air-dry completely before reconnecting the power bank.
- Store dry indoors after outdoor use; do not leave the cushion permanently outside.
- Store flat without heavy objects on top; do not kink the cable and close the zipper gently.

Technical information

PRODUCT	Warmpi Outdoor heated seat cushion
SIZE	40x40x5cm
PADDING	5 cm memory foam
HEAT	3 settings: green approx. 35 °C / blue approx. 45 °C / red approx. 55 °C
POWER	5V DC - minimum 2A - USB-A
CABLE	integrated - approx. 2.5 m
POWER BANK	Warmpi 10,000 mAh included
MATERIAL	water-repellent UV-resistant outdoor fabric
SECURING	2 hook-and-loop straps

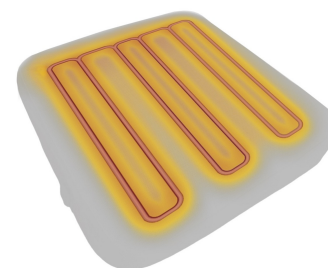

Disposal and contact

Do not discard electronics or power banks with household waste; recycle separately under local rules. Warmpi · De Vest 25 · 5555 XL Valkenswaard · The Netherlands · info@warmpi.com · www.warmpi.com